



Assembling Parabolic Solar Cooker Tripod Base Stand

This guide will help you put together the tripod base stand.

Written By: Ashlie Reott



INTRODUCTION

A stand created by three legs is a common method of supporting a load.



TOOLS:


- [Socket 14mm](#) (1)
- [14mm Wrench](#) (1)



PARTS:

- [Tripod Stand Leg](#) (3)
- [14mm Bolt](#) (3)
- [14mm Nut](#) (3)

Step 1 — Assembling Parabolic Solar Cooker Tripod Base Stand

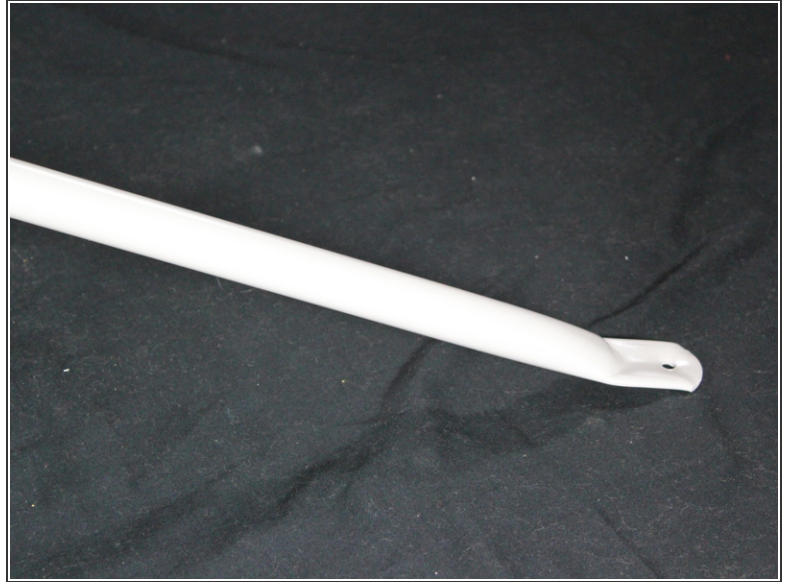

- Insert a 14mm bolt through each tripod leg and through the center plate. Secure each bolt by hand threading a nut on the other side.

i Be sure the flat side of each tripod leg is facing toward the ground.

Step 2



- Tighten each nut using two 14mm wrenches until each leg is stable and the tripod will stand on its own.

To disassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 08:17:29 AM.